

How To Care For Your Binoculars

Proper cleaning of the lenses is essential to maintaining the optical integrity of your binocular. Dirty lenses diminish the amount of light transmitted through the binocular and your overall viewing experience.

1. When wiping the lenses, use the lens cloth that comes with the binocular, or a soft, lintless cloth.
2. To remove any remaining dirt or smudges, add one or two drops of isopropyl alcohol to the cloth.
3. Store your binocular in a moisture free area. Don't leave the binocular in a car on a hot/sunny day or near anything that generates heat as this may cause damage.

Warranty

saxon warrants that during the Warranty Period, your saxon product will, with normal use and service, be free of defects in materials and workmanship. For the binoculars, we provide 3-Years Limited Warranty. If warranty problems arise or repairs are necessary, contact the saxon customer service department if you live or the dealer where you purchased your binocular from.

The contact information can be found on last page of this user manual.

If you love using binoculars to spot your favourite animal or plant hidden in nature but hate having to constantly focus the lenses, the **saxon Focus Free Binoculars** are here to help! They allow you to follow rapidly moving action without focusing. Perfect for watching the whale, races, tennis and other general use.



CAUTION!: Viewing the sun can cause permanent eye damage. Do not view the sun with this binocular or with the naked eye.

Adjusting The Interpupillary Distance (IPD)

The distance between the eyes, called "interpupillary distance," varies from person to person. To achieve perfect alignment of lens to eyes, follow these simple steps.

1. Hold your binocular in the normal viewing position.
2. Grasp each barrel firmly. Move the barrels closer together or further apart until you see a single circular field. Always re-set your binocular to this position before using it.



Tripod Adjustment Thread

The Focus Free binoculars feature built-in threads that allow the binoculars to be attached to a tripod by using a binocular tripod adapter. These threads can be accessed by unscrewing the plate found on the front of the hinge. Attaching the binoculars to a tripod, thread the optional adapter into the binoculars and attach the other end of the adapter to a tripod. Mounting the binoculars onto a tripod allows better stability and comfort during prolonged viewing.



Waterproof/ Fogproof

Your saxon binoculars may be designed and built utilizing the latest waterproof and fogproof technology saxon waterproof models are O-ring sealed for complete moisture protection. Fogproof protection is achieved from dry nitrogen purging that removes all internal moisture.

Tip: Eyeglasses worn for nearsightedness should be worn when using binoculars as you may not be able to obtain focus at infinity without them.

Optional Accessories

Fits all Focus Free binoculars:

Fits #144020 & #144003:

